


IMPORTANT

PLEASE READ BEFORE ATTEMPTING TO CHANGE CONTROL BOARD

Instructions for Advanced Replacement Revision C Control Boards for Technik Mfg. Vending Machines

- 1. Unplug the machine from wall receptacle to prevent accidental electrical shock.
- 2. Locate the control board in the machine.
 - *Note* Depending on the machine model, the inner mechanism or other item(s) may need to be removed to allow better access to the control board.
- Carefully pull one of the connectors off the control board and mark a symbol or number on it using wire labels or masking tape and a pen. Mark the corresponding connector on the control board layout that follows these instructions with the same symbol or number you put on the harness connector.
- 4. Repeat Step 3 with every connector until all of the connectors have been removed from the control board.
- 5. Using needle nose pliers or a board puller, remove the control board from the 4 plastic standoffs by squeezing the protruding ends together.
- 6. Install the new or reconditioned control board into the machine.
- 7. Using the control board layout as a reference, plug each labeled connector into its corresponding place on the control board.
- 8. Plug the machine into wall receptacle and turn it on.
- 9. Most of our control boards are set for machines with 4 columns. If you have a machine with 2 or 8 columns your machine may need to be re-initialized. To do this, put your machine in "Price" mode. Hold down the "Clear Count" or "Next" button, and turn the machine off for at least 2 seconds. Turn the machine back on and let go of the "Clear Count" or "Next" button when the machine starts beeping.
- 10. Now the machine will have to be re-priced. Check the user's manual that came with your machine to learn how to set the prices.

Control Board Layout

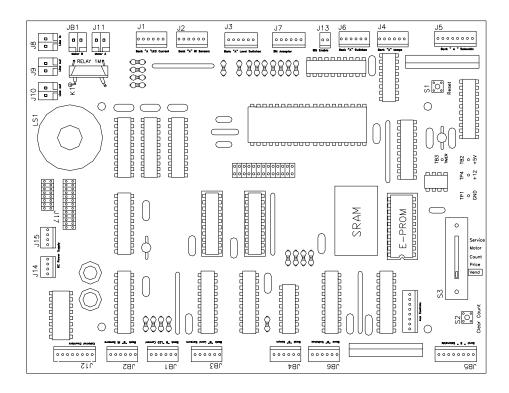

For telephone support you may contact us at 1 (800) 795-8251 between the hours of 8:00 a.m. and 7:00 p.m. CST Monday through Friday, and 9:00 a.m. to 3:00 p.m. CST on Saturdays.