



## Instructions for Advanced Replacement Coinco Bill Acceptors for Technik Mfg. Phone Card and Gift Card Vending Machines

Tools: 11/32" nut driver or wrench, small wire cutters or scissors, several small cable ties, test money, and flashlight (not needed but helpful).

1. Unplug the machine from wall receptacle to prevent accidental electrical shock.
2. Open the cash door on the machine. Remove the cash box from the back of the bill acceptor by carefully pushing tab forward and sliding the cash box upwards. (See Figure 1)

**\*\*WARNING\*\*** If tab is pushed too hard it will break.


3. Locate and remove the "logic board case" from the back of the machine. Depending on the model and age of the machine, the logic board case may be attached by either heavy duty Velcro, or a metal bracket. It may be necessary to cut the cable ties holding the wires going from the bill acceptor into the logic board case.

Note: Logic Board case may vary in size and color depending on the age of the bill acceptor.


4. Unplug connector #1 and connector #2. (See Figure 1)
5. Using a nut driver or wrench, remove the four 11/32" nuts holding the bill acceptor in place. (See Figure 1)
6. Remove the defective bill acceptor and logic board case. Place the new or reconditioned Coinco bill acceptor in place of the old one. Thread 11/32" nuts onto the studs and tighten.
7. Insert connector #2 into the female plug on the harness inside of the machine.
8. Plug connector #1 into the bottom of the logic board case, making sure the white wire is closest to the middle of the logic board case. (See Figure 2) If the plug on the connector fits on only one way the position of the white wire is not important.
9. Fasten the logic board case to the back of the machine with either Velcro or the metal bracket that was previously used.
10. Replace any cable ties that had to be cut to remove the bill acceptor.

11. Install the cash box to the back of the bill acceptor by lining up the tabs and snapping it downwards. If the Coinco bill acceptor you received did not come with a cash box you may use the one that was previously on the machine.
12. The machine may now be plugged in and tested. There should be a solid red light visible on the logic board case. If there is no solid red light, make sure there are cards in the machine. If there are cards in the machine and there is still no solid red light make sure connector #1 is plugged in the right way. (See Step 7)

**Figure 1**

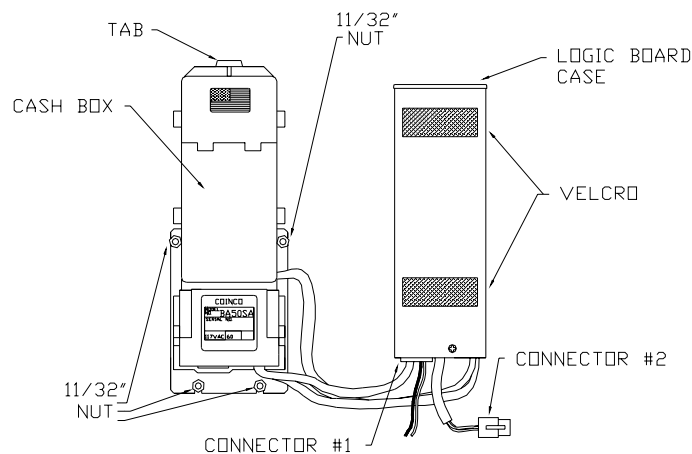

**Figure 2**

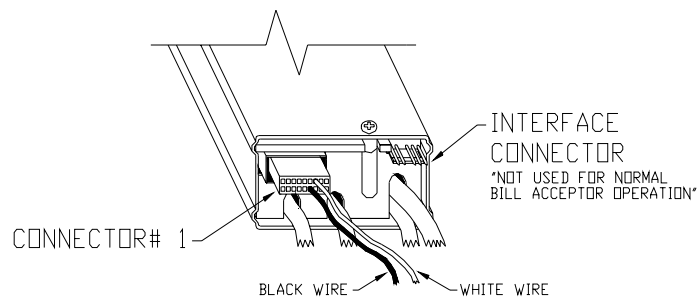

**For telephone support you may contact us at 1 (800) 795-8251 between the hours of 8:00 a.m. and 7:00 p.m. CST Monday through Friday, and 9:00 a.m. to 3:00 p.m. CST on Saturday.**